



- A. With a wrench, secure the eccentric (4) onto the pipe (the cold and hot water connections).
- B. Place the rosette (3) on the eccentric (4).
- C. Connect the faucet (1) by placing the gaskets (2) onto the threads and twist them tightly onto the eccentric. Check that everything is hermetically.
- D. After connecting the body of the faucet to the piping, remove the faucet aerator, run the water to drain all the impurities, reattach the faucet aerator and ensure that the faucet is working correctly by moving the handle in all directions. Check the connections for leaks.